

Octodash

Basic OS

download and install the latest [octoPi](#) as in [install_raspbian_on_f2fs_root](#)

Display

get the [display](#) up and running:

```
sudo apt update
sudo apt upgrade
sudo apt install git
git clone https://github.com/waveshare/LCD-show.git
cd LCD-show/
sed -i 's/ext4/f2fs/' cmdline.txt
chmod +x LCD35-show
./LCD35-show
```

From:

<http://wiki.psuter.ch/> - **pswiki**

Permanent link:

<http://wiki.psuter.ch/doku.php?id=octodash&rev=1608660889>

Last update: **22.12.2020 19:14**

